



FIELD WIRING FOR THE FOLLOWING ACCESSORIES:

- BOLTSWITCH "CAP-2" CAPACITOR UNIT
- BOLTSWITCH "PW" PADDLE WHEEL BLOWN FUSE DETECTOR
- BOLTSWITCH MODEL "PND" PHASE FAILURE RELAY
- KEY INTERLOCK
- REMOTE CLOSE, MOMENTARY CONTACT, 1/2 SEC. MAX.
- REMOTE TRIP AND INDICATOR LIGHTS
- CONTROL TRANSFORMER FOR CLOSING

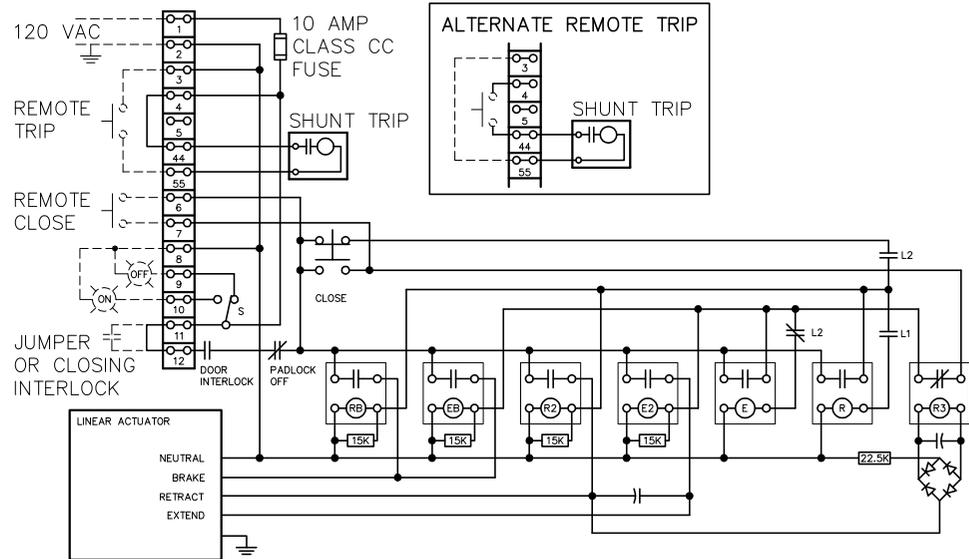


INTERNAL FACTORY WIRING

- DOTTED LINES INDICATE FIELD WIRING OPTIONS

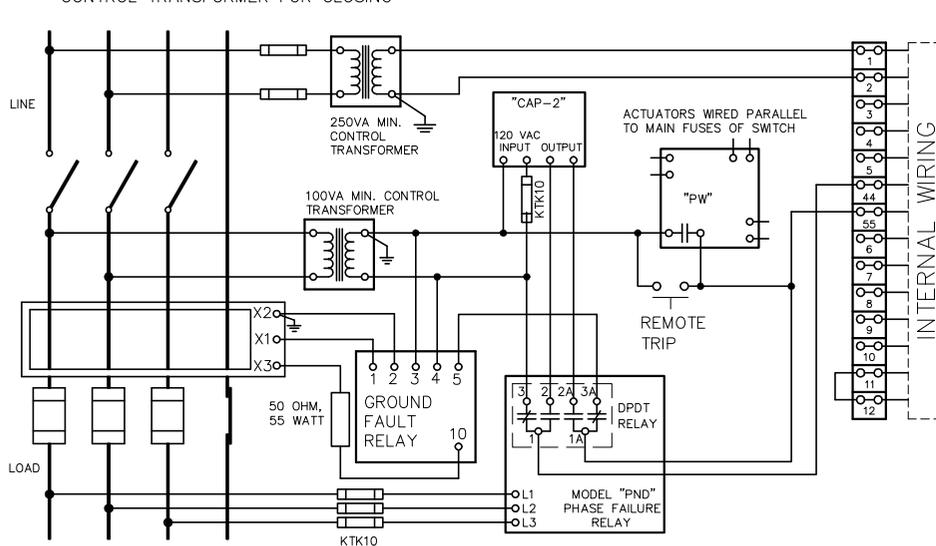

FIELD WIRING FOR THE FOLLOWING ACCESSORIES:

- BOLTSWITCH GROUND FAULT SENSING EQUIPMENT
- BOLTSWITCH "CAP-2" CAPACITOR UNIT
- BOLTSWITCH MODEL "PND" PHASE FAILURE RELAY
- CONTROL TRANSFORMER FOR CLOSING
- BOLTSWITCH "PW" PADDLE WHEEL BLOWN FUSE DETECTOR
- REMOTE TRIP

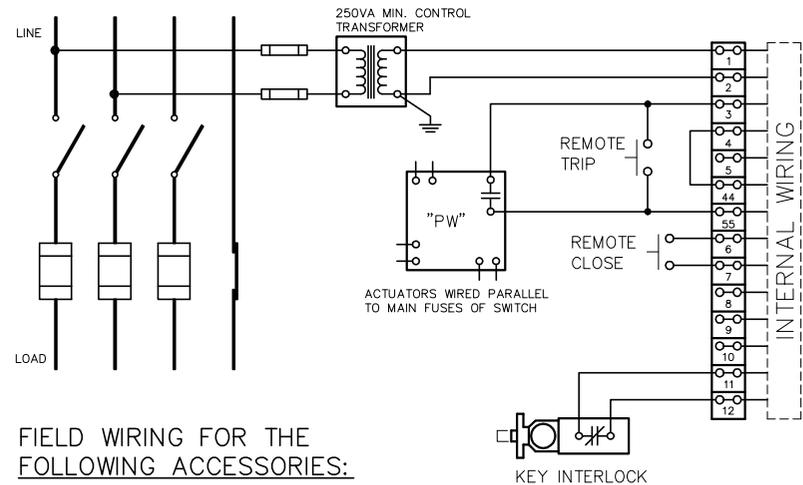

FIELD WIRING FOR THE FOLLOWING ACCESSORIES:

- BOLTSWITCH "PW" PADDLE WHEEL BLOWN FUSE DETECTOR
- REMOTE CLOSE, MOMENTARY CONTACT, 1/2 SEC. MAX.
- REMOTE TRIP
- KEY INTERLOCK
- CONTROL TRANSFORMER FOR CLOSING

WIRING DIAGRAMS FOR ADDING ACCESSORIES TO SWITCHES WITH MST OPERATORS

SCALE:	APPROVED BY:	DRAWN BY WCE
DATE: 3-11-93		REVISED 3