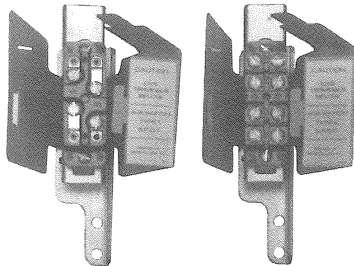


boltswitch**AUXILIARY SWITCHES**

TYPE 1

TYPE 2

CONTACT RATINGS**Type 1 — Single Pole, Double Throw**

AC - 50 or 60 Hz				DC		
Volts	Make	Break	Cont.	Volts	Make & Break	Cont.
120	40A	15A	15A	115	.50A	15A
240	20A	10A	15A	230	.25A	15A
480	10A	6A	15A	—	—	—
600	8A	5A	15A	600	.05A	15A

Type 2 — Double Pole, Double Throw

AC - 50 or 60 Hz				DC		
Volts	Make	Break	Cont.	Volts	Make & Break	Cont.
120	30A	3.0A	10A	115	1.0A	10A
240	15A	1.5A	10A	230	.30A	10A
480	7.5A	.75A	10A	—	—	—
600	6.0A	.60A	10A	600	.10A	10A


One or more **BOLTSWITCH** Auxiliary Switches can be installed on a **BOLTSWITCH** Bolted Pressure Contact Switch for applications requiring remote "ON" or "OFF" indication, or electrical interlocking.

The **BOLTSWITCH** Auxiliary Switch is designed so that the major impact from the movement of the crossbar arm is not absorbed by the snap switch. Snap switch terminals are completely isolated from all live or moveable parts.


Two types are available: Type 1 is single pole. Type 2 is double pole. Both are double throw.

They may be mounted in Position 1, where it is actuated when the Bolted Pressure Contact Switch is in full closed and bolted condition and/or Position 2, where it is actuated when the Bolted Pressure Contact Switch is in full open condition.

Auxiliary Switches are available only as factory installed accessories to basic switches. Specify Type and Position when ordering.

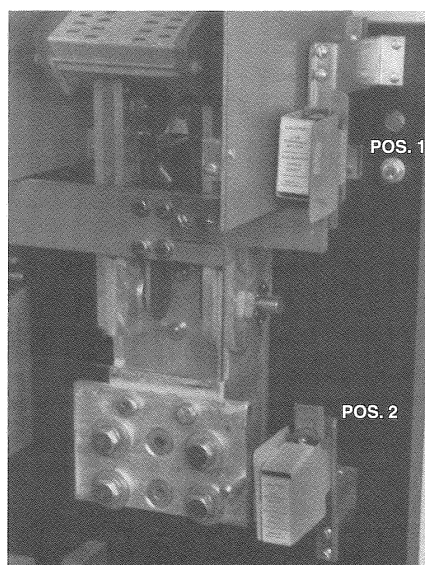

SWITCH IS FULL CLOSED & BOLTED.

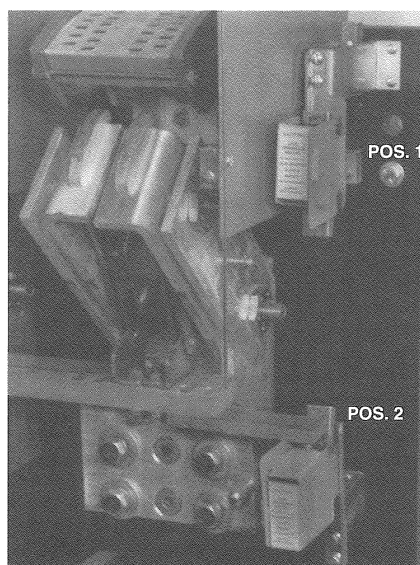

SWITCH IS FULL OPEN.

boltswitch[®], inc.

CRYSTAL LAKE, ILLINOIS 60014

DECEMBER, 1995